

Features

1. Adopt high quality 5050 LEDs.
2. Excellent flexibility, bending radius should be greater than 2cm.
3. High efficacy up to 102 lm/w.
4. Cutable every 50mm[1.97in] for various application.
5. Cost-effective one to choose.

Bending radius: $R_{min}=20mm$



Application

indoor&outdoor lighting, light box etc

Installation

Fix by 3M self adhesive tape



Specification

Model No.	Light Color	Color Temperature/Wavelength(K/nm)	Beam Angle	Typical Luminous Flux(Lm/m)	Ra	Efficacy (Lm/W)	Voltage (V DC)	Power (W/m)
FN5050W-60-12-W	White	3000	120°	1121	80+	100	12V	14.4
		6500		1148		102		
		11000		952		83		

Temperature-Related Parameters(Normal Working)


Model No.	Power(W/m)	No Brightness Difference MAX(m)	UL Max Run (m)	T _a (°C)	Operating Temp MAXTc(°C)
FN5050W-60-12-W	14.4	2	3	-20~+60°C	95°C

Other Parameters

Model No.	LED Quantity(pcs/m)	Min Cuttable Length(mm)	Storage Temperature(°C)
FN2835W-60-12-W	60	50	-20~+70°C

NOTE:


1. Test environment temperature : 25±2°C.
2. Figures above are typical figures. Actual figures could be different with typical figures, and the data is subject to change without notice.
3. The luminous flux is tested with corresponding color light on.
4. Different color temperature or wavelength will make luminous flux different.
5. The Luminous efficiency is measured value.
6. Max run is in single feed.
7. UL max run refers to operating length at UL class II @60W.12V.
8. The luminous flux and power tolerance within ±10%.
9. Cutting marks see profile drawing below.

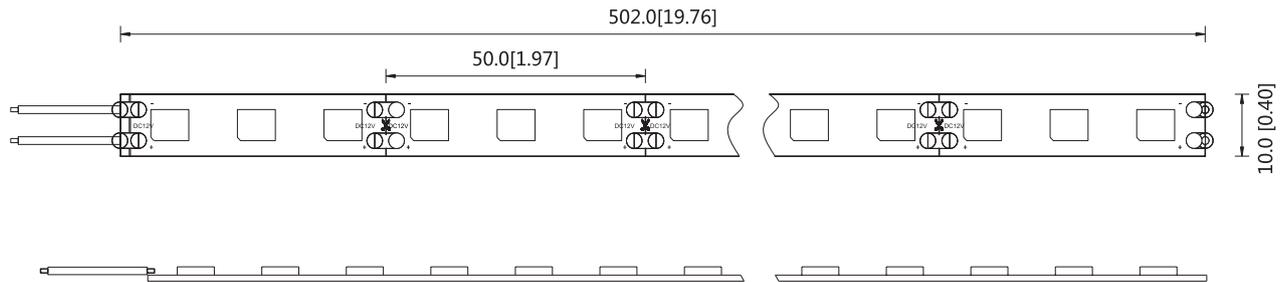Profile Drawings
Unit:mm


Note: Please ask the sales for detail drawing.

Operating Length VS. Electrical Parameters


FN5050W-60-12-W	Operating Length(Single Feed)(m)				
	1	2	3	4	5
Parameters					
Operating Voltage (DC V)	12.0	12.0	12.0	12.0	12.0
Total Current (A)	1.2	2.13	2.78	3.17	3.48
Total Power (W)	14.4	25.56	33.36	38.04	41.76
Head voltage(V)	11.89	11.84	11.81	11.76	11.76
Tail voltage (V)	11.73	11.28	10.61	10.01	9.39
Head Current(mA)	59.35	58.92	58.77	58.58	58.53
Tail Current(mA)	57.89	50.25	40.15	29.96	20.9
Head-to-tail Voltage Drop Rate(%)	1.35	4.73	10.16	14.63	20.15
Head-to-tail Current Drop Rate(%)	2.46	14.7	31.68	48.88	64.29
Single or Double Feed	Single Feed	Single Feed	Single Feed	Single Feed	Single Feed

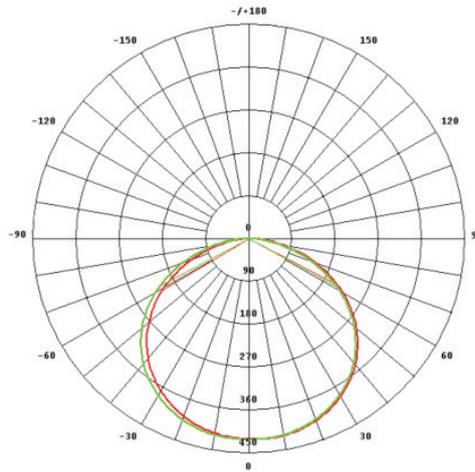Luminous Intensity Distribution Diagram


Unit: cd


— C0 /180,121.2°

— C90/270,122.8°

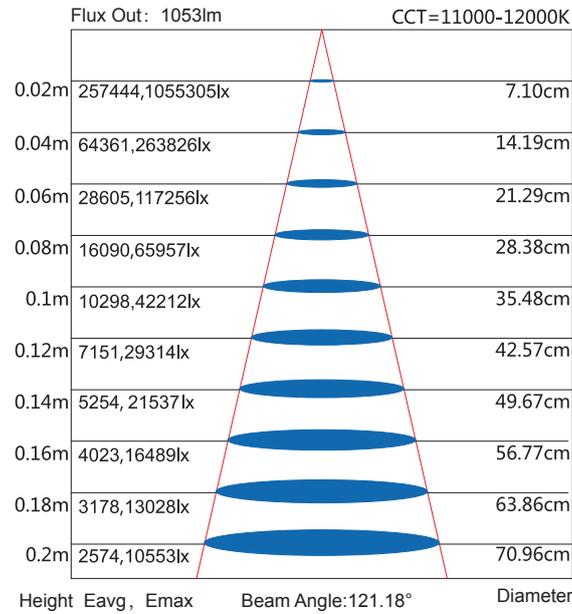
AVERAGE BEAM ANGLE(50%): 122.0°
Average Illumination


Note: please contact sales for other data.


packing

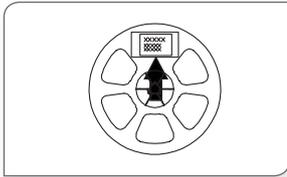


Label the reel;

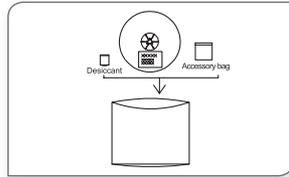


Put reel, accessory bag and desiccant together into static shielding bag;

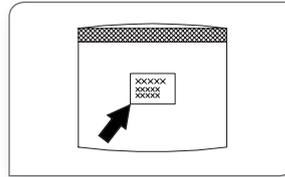


Seal and label the static shielding bag;

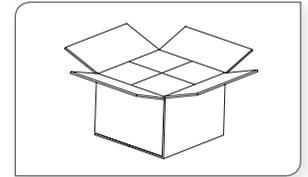


Put the packed static shielding bag into carton box;

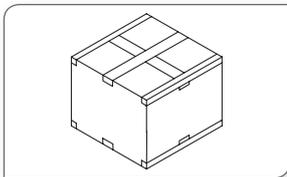

Seal the carton box;

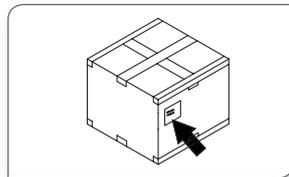

Label the box;

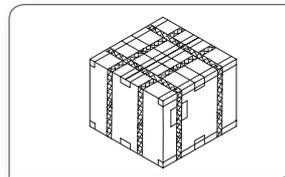

Use packing belt to pack. Add edge protectors if necessary.

Packaging information

Model No.	Product Size L*W(mm)	Carton Size(mm)	Meter/Reel	Reel/Carton	Net Weight(kg)	Gross Weight(kg)
FN5050W-60-12-W	5000*10	550*400*340	5	100	9.55(1±10%)	13.15(1±10%)

Note:

Every 5m for a reel, one reel for a static shielding bag.


The above quantity and weight are only for the illustrated packaging method. There will be differences in the quantity and weight with other packaging methods.

Installation


1.Products and Tools




FN5050W-60-12-W

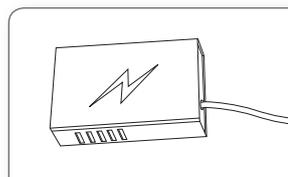


LED power supply

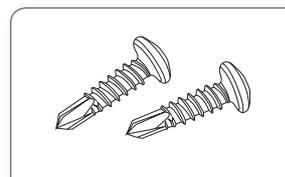


Self-tapping screw

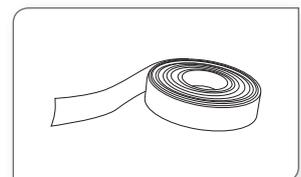


Insulation Tape

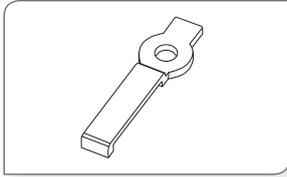


Clips

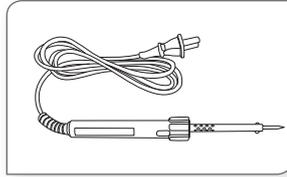

Electric iron

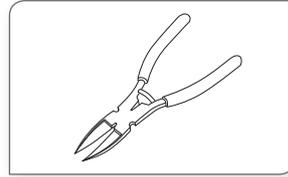





Diagonal pliers

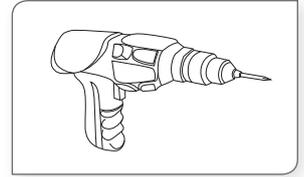

Electric drill






2.Installation Methods and Steps

Aluminum channel installation

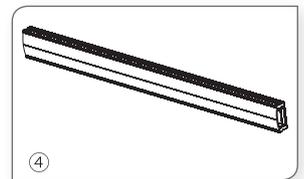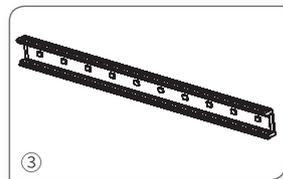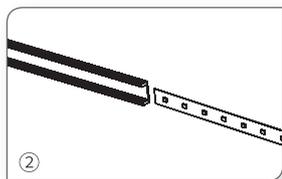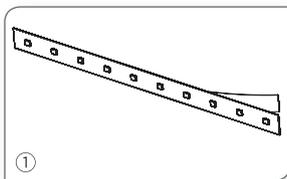

1. Peel away the self adhesive tape on the back of strip.
2. Cut off the excess part based on the installation position.
3. Evenly arrange the strips with appropriate space in the track.
4. Install the cover and end cap.

Covered channel installation

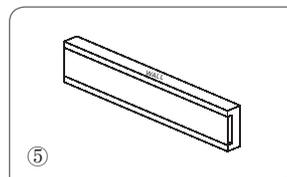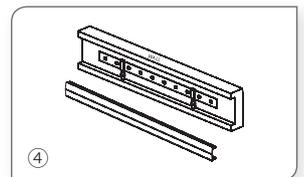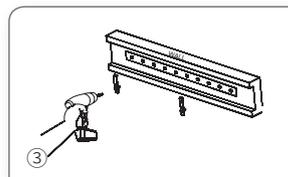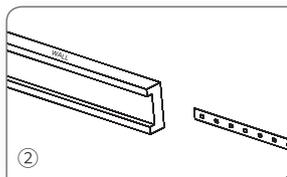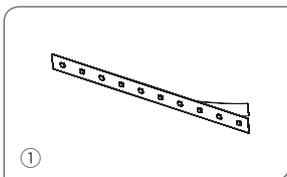

1. Peel away the self adhesive tape on the back of strip.
2. Cut off the excess part based on the installation position.
3. Evenly arrange the strips with appropriate space in the track and fix them with clips.
4. Install the cover and end cap.
5. Finished



Attentions before installation

- Before installation, check that the product parameters are consistent with the requirements (Seeing product specifications or product labels)
- Load voltage, current, power and power supply should be matched with the product.
- Follow the instructions of wiring diagram (first connect the load and then the power supply) to avoid short circuit.
- Make sure the correct connection of positive and negative poles between products and power supply. Otherwise, the light will not be on.
- Make sure the power cord firmly screwed into the terminal and it should not be pulled out by hands.
- The terminal should have insulation, waterproof and anti-corrosive treatment.
- If the working length exceeded the max run length, make sure to have extra power supply.
- If it needs higher current of a LED, make sure having extra cooling.

Common Faults and Troubleshoot

Quick Guide		
Problems	Reasons	Solutions
All LEDs can not light on.	No electric supply.	Power on
	Automatic power protection from the open or short circuit in output of the power supply.	Fix the short circuit problem.
	Wrong connection of power supply.	
LEDs can not light on partly.	Some switching mode power supplies are not powered.	Check the power supply system to fix it.
	Power supply line error.	
	Mistaken wire connection of some of products	Correctly connection
Brightness of LED is inconsistent or insufficient.	Power overloaded.	Replace with more powerful power
	Power supply circuit excessive consumption.	Make sure the working voltage of the product within $\pm 5\%$ of standard voltage, or keep balance by circuit power consumption.
	Excessive quantities in series connection of the product	Reduce the quantities of the product in series connection to meet requirement.
LED flicker.	Connection point fault.	Remove bad connection point.
	Switching power supply failure.	Replace a new power supply.
	Wrong Installation or use of products	Please follow the instructions

Warning

- Do not disassemble or retrofit the light. Do not touch the surface of the light with a sharp object.
- Do not do live-line working during installation, especially for high voltage product.
- Do not use any organic chemical solvents.
- Use neutral glass adhesive to fix this product and it needs to be dried 4 hours in the open environment after operation.
- Treat the ends and the circuit connection points that are not connected to the main line with insulation, waterproof, and anti-corrosion in the installation.
- Use 18AWG (0.75mm² cross-sectional area) or thicker core wire to avoid adverse consequences caused by overheating, if the power cable need to lengthen.
- Make sure the input voltage meets the requirements and lines are connected correctly before lighting on.
- This product is for signage, and do not use as general lighting.
- Series connection within the max run.
- The length of the power cable between the power supply and the led strip should not exceed 2 meters. Otherwise, large circuit loss will lead to inconsistent brightness.
- Installation, maintenance and repair should be operated by a qualified technician.

Statements and Recycling

Statements:

Repair should be operated by a qualified technician, if the external circuit or main line of this product is damaged.
The parameters given in this manual are typical values and for reference only.
All illustrations and drawings in this manual are for reference.
This product is subject to change without notice.

Recycling:

LED lighting products belongs to electronic products, please do recycling treatment according to the relevant WEEE directives.